



## Roller Shades – Corner Installations

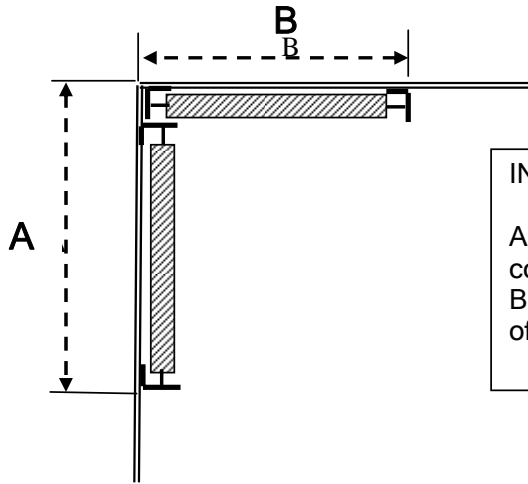


### INSTALLATION #1

A = Edge of window, back into wall on corner.  
B = Edge of window from corner, to edge of window

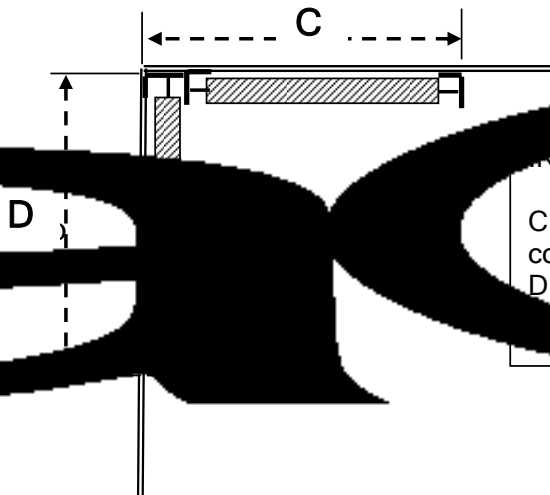

### INSTALLATION #2

C = Edge of window, corner.  
D = Edge of window, to edge of window

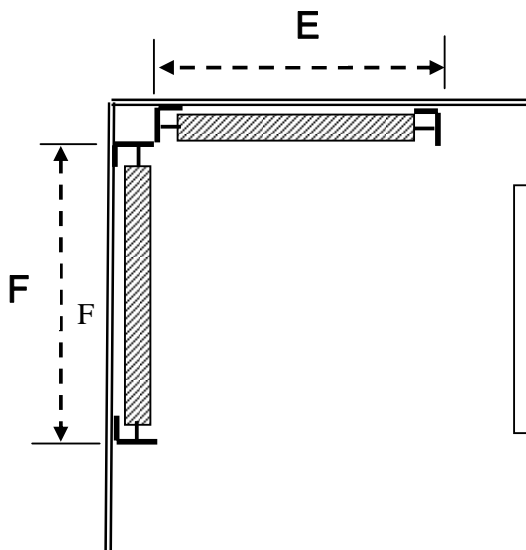

### INSTALLATION #3

E & F - Bracket to Bracket measure  
Provide actual measurements, we will make necessary standard deductions.